 
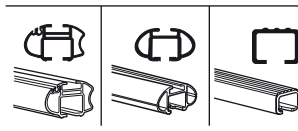 


Kit 1183

 
MITSUBISHI Pajero, 3-dr SUV, 99-06

MITSUBISHI Montero, 3-dr SUV, 99-06



480R
754



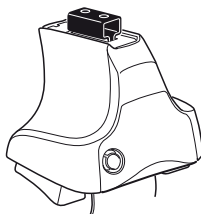


480

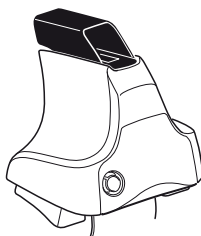

750

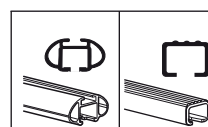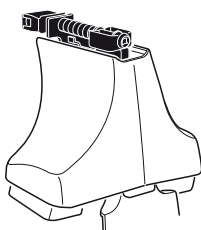  

   				
  x2  x2  x2  x4	  x2	  x2  x2  x4  x4	  x2  x2	  x2

1



 
480R/754



480



750

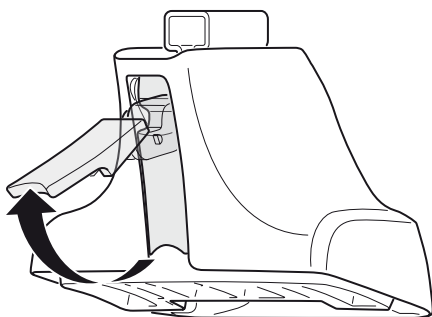

2



480R/754

 
 
 
 
 
 
 
 
 
 
 
 


480




750


+

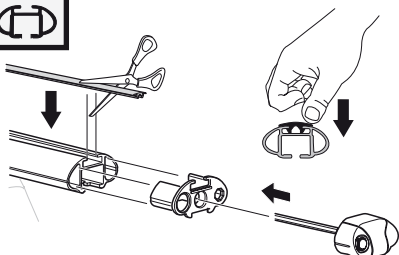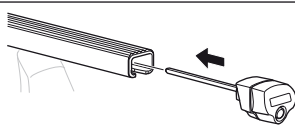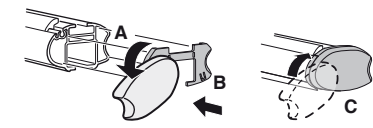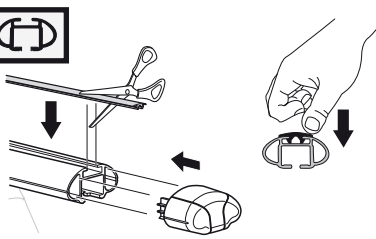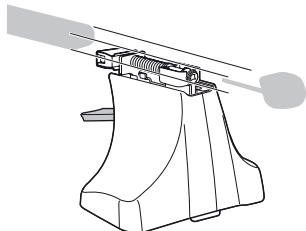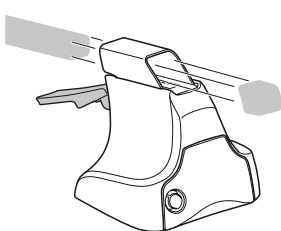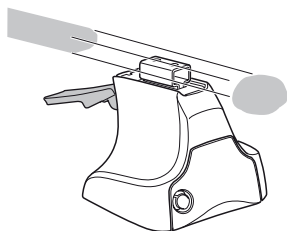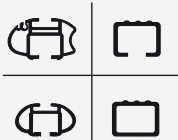

3

 


754

 


750



 1

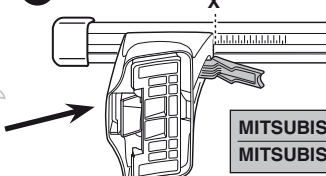


2

 


X	
MITSUBISHI Pajero, 3-dr SUV, 99-06	48,5
MITSUBISHI Montero, 3-dr SUV, 99-06	48,5

 1

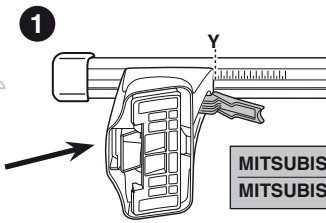

2

 

Y	
MITSUBISHI Pajero, 3-dr SUV, 99-06	47,5
MITSUBISHI Montero, 3-dr SUV, 99-06	47,5

 


480R



480

1




2



	X inch	X mm
MITSUBISHI Pajero, 3-dr SUV, 99-06	44 ³ / ₄ "	1136 mm
MITSUBISHI Montero, 3-dr SUV, 99-06	44 ³ / ₄ "	1136 mm

 1















2




	Y inch	Y mm
MITSUBISHI Pajero, 3-dr SUV, 99-06	44 ³ / ₈ "	1126 mm
MITSUBISHI Montero, 3-dr SUV, 99-06	44 ³ / ₈ "	1126 mm

4

          
 
 
MITSUBISHI Pajero, 3-dr SUV, 99-06
MITSUBISHI Montero, 3-dr SUV, 99-06

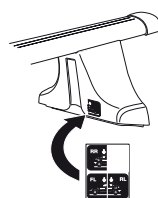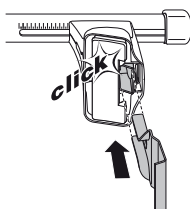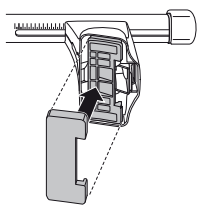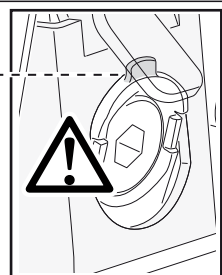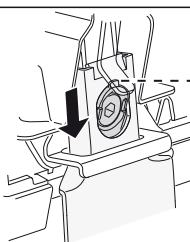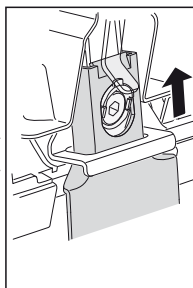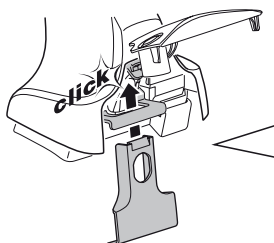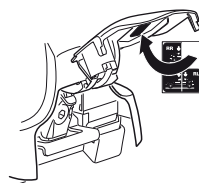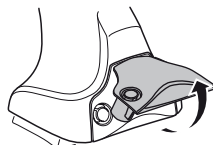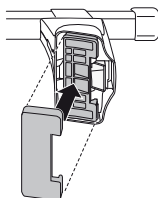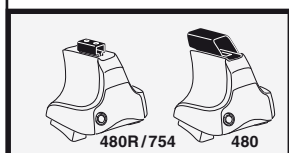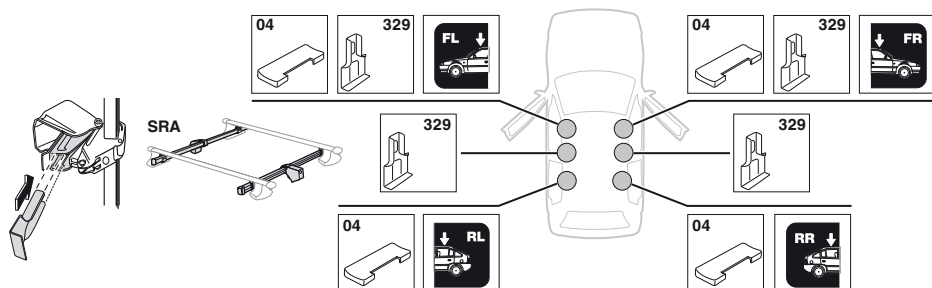

5

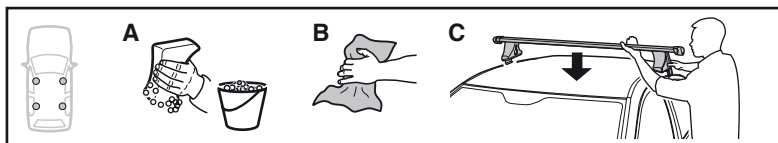 

	X mm	Y mm	Z mm	X inch	Y inch	Z inch
MITSUBISHI Pajero, 3-dr SUV, 99-06	330 mm	700 mm	390 mm	13"	27 1/2"	15 3/8"
MITSUBISHI Montero, 3-dr SUV, 99-06	330 mm	700 mm	390 mm	13"	27 1/2"	15 3/8"

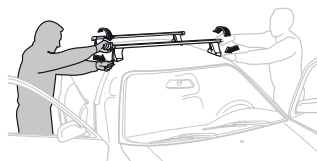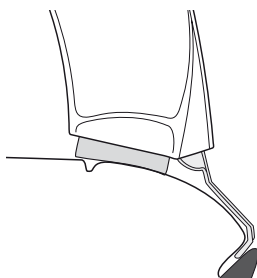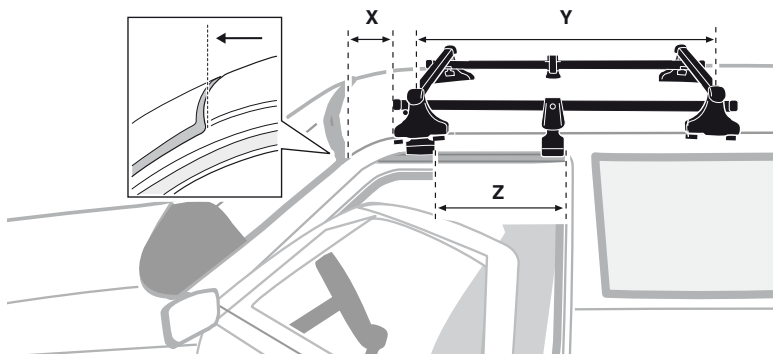   


GB/US Tighten alternately
D Die Schrauben abwechselnd anziehen
F Serrer alternativement chaque côté
NL Afwisselend aan de linker- en de rechterkant aandraaien
I Alternare il serraggio delle viti
E Apretar alternativamente
PT Aperte alternadamente
S Dra åt växelvis
FIN Kierrä vuorotellen
EST Pinguldage vaheldumisi
LAT Pievelciot pamišus
LIT Užsukinėkite pakaitomis
PL Śruby dokręcaj naprzemiennie
RU Затягивайте попеременно

CZ Pokręťta bagażnika dokręcaj dokręcaj naprzemiennie.
SK Doťahujte striedavo
SLO Privijajte izmenično.
HR Naizmjenično zategnite
HU Egyarástól fűggetlenül szorítandó
GR Σφιγγετε εναλλάξ
TR Dönüşümlü sıkın

中文 交替拧紧
한국어 번갈아 가며 조이십시오.
日本語 交互に締め付けてください。
ไทย ชั้นในแบบสลับ


 
6





480R/754



  
480

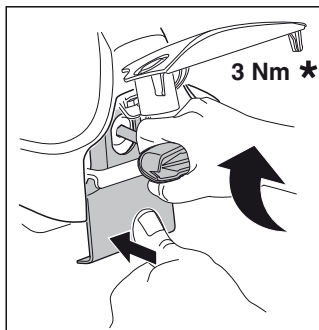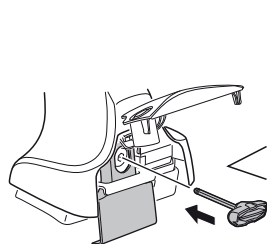

3 Nm *

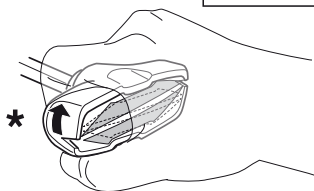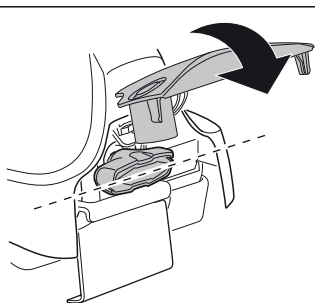  


*

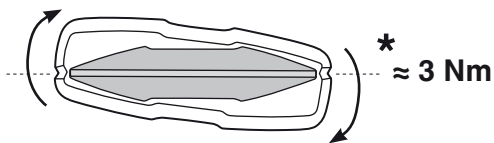 


* $\approx 3 \text{ Nm}$



 750

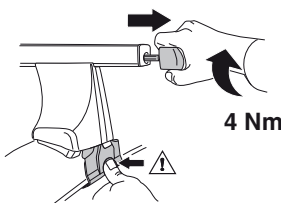


4 Nm

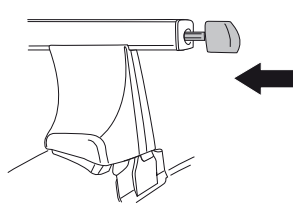 


i



 
1

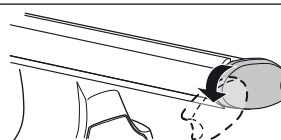


2

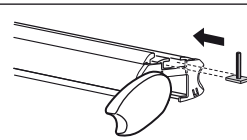 


i

 

1

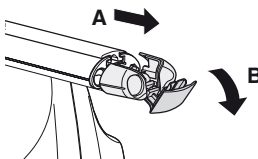 


2

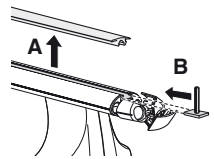 


i








 1

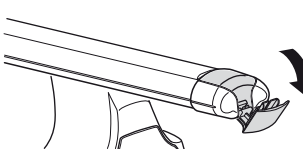

2

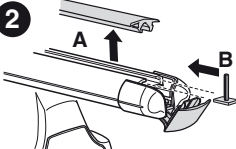 

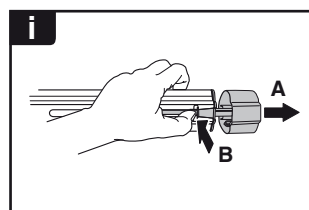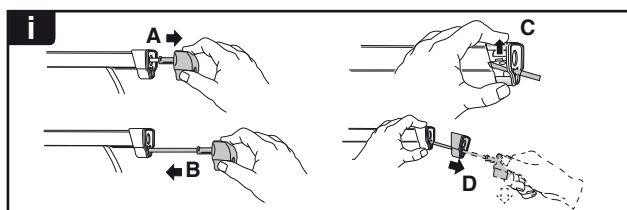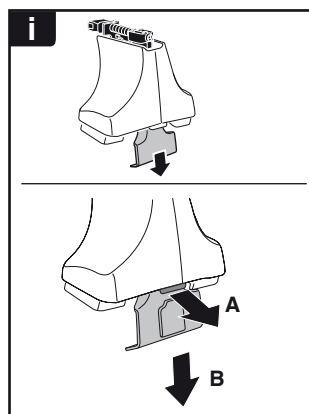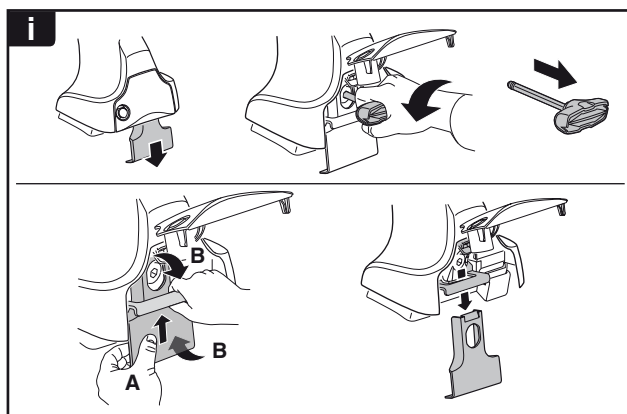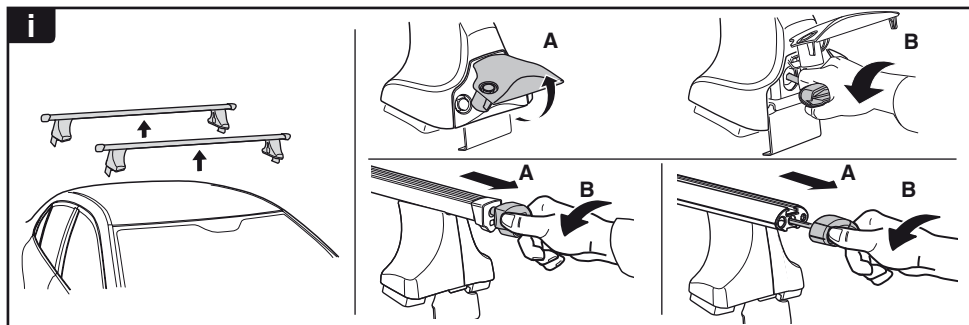     

THULE®
SWEDEN

**ONE
KEY
SYSTEM**

		(x4)
		(x6)
		(x8)
NA		(x10)
EUR		(x12)
ASIA		