






## Thule XT Kit 3155

# > Instructions

**CITROËN** Dispatch, 4-dr Van, 16-  
**CITROËN** Jumpy, 4-dr Van, 16-  
**CITROËN** SpaceTourer, 5-dr Bus, 16-  
**OPEL Vivaro**, 4-dr Van, 19-  
**OPEL Zafira Life**, 5-dr Bus, 19-  
**PEUGEOT** Expert, 4-dr Van, 16-  
**PEUGEOT** Traveller, 5-dr Bus, 16-  
**TOYOTA** ProAce, 4-dr Van, 16-  
**TOYOTA** ProAce Verso, 5-dr Bus, 16-  
**VAUXHALL Vivaro**, 4-dr Van, 19-  
**VAUXHALL Vivaro Life**, 5-dr Bus, 19-

This kit is only for vehicles with fixpoint mounting.

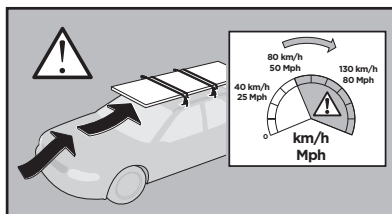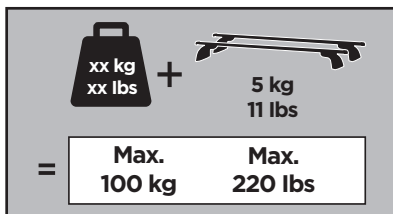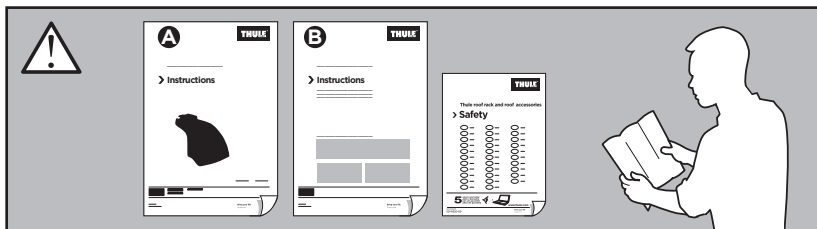


ISO 11154-E

183155

C.20191210  
509-3155-03

Bring your life  
thule.com

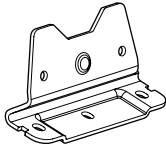


◀ **07** x4




50030  
20 mm x4



31310 x4




x1

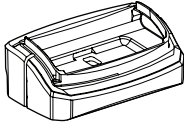

◀ **16** x4



52821 x4

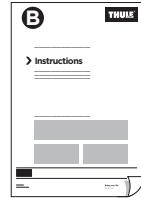


x1

**A**




12 mm x8




x1

**1**


**07**



**16**



**16**




**07**




**07**



**16**








**16**




**07**




2

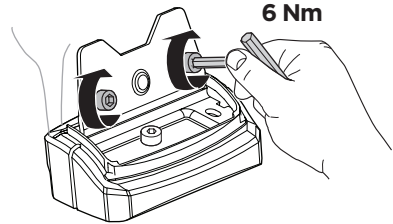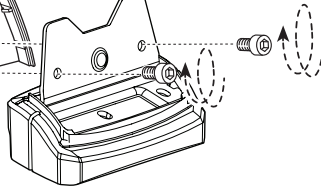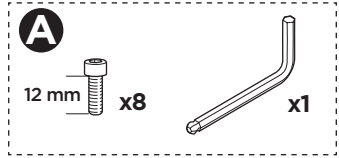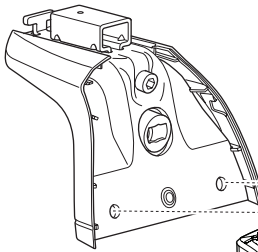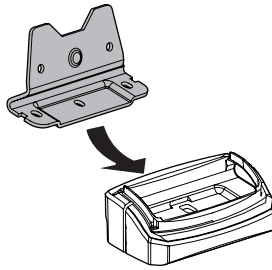



3




x1

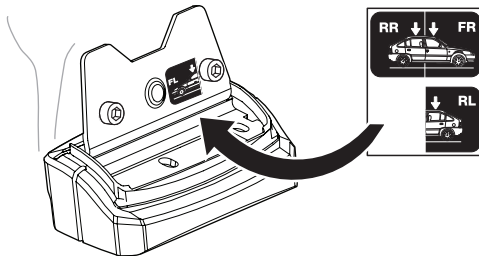


**4**




**A**

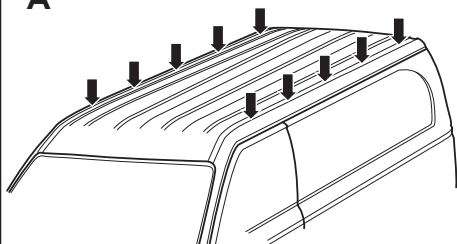


**B**

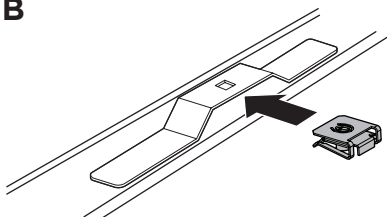

**C**

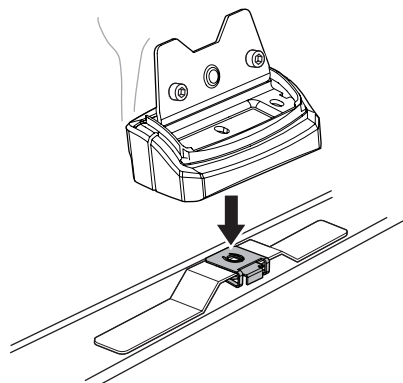

**D**

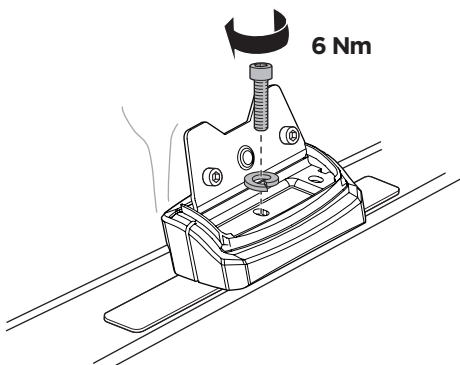

**5**

